


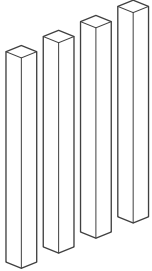
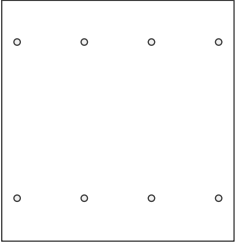
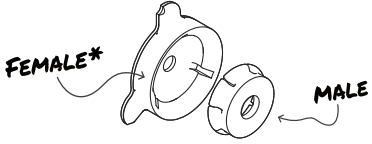




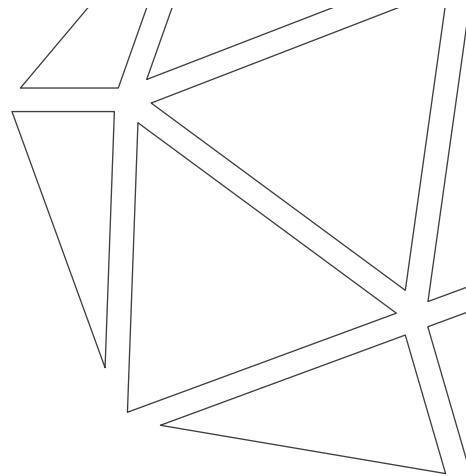


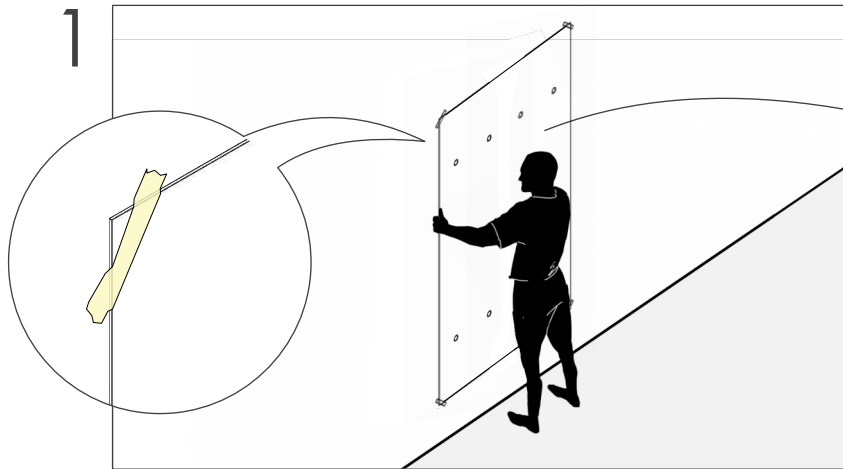
<p><b>BATTENS</b></p> 	<p><b>STENCIL</b></p> 	<p><b>READY-CLIP™</b> <small>*Already attached to batten</small></p>  <p><b>SCREWS</b></p>  <p>8g GIB Screws</p>
---	--	--




**NOT INCLUDED**

	
<p>Phillips</p>	<p>2 x person assembly recommended*</p>
	
<p>Pencil</p>	
	
<p>Masking Tape</p>	
	
<p>Measuring tape</p>	<p>2 x ladder recommended*</p>


\*For ceiling



Align stencil to surface of install, attach to wall using a stapler, masking tape or pins. Take care that the stencil is flat, it is critical to have precise location of fitments.

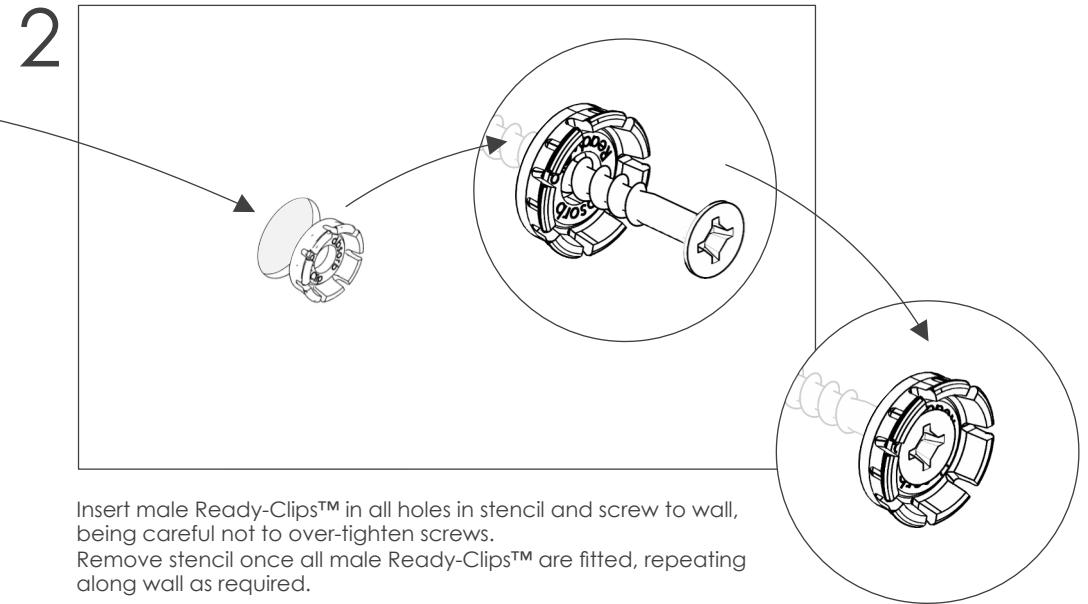


Insert male Ready-Clips™ in all holes in stencil and screw to wall, being careful not to over-tighten screws. Remove stencil once all male Ready-Clips™ are fitted, repeating along wall as required.

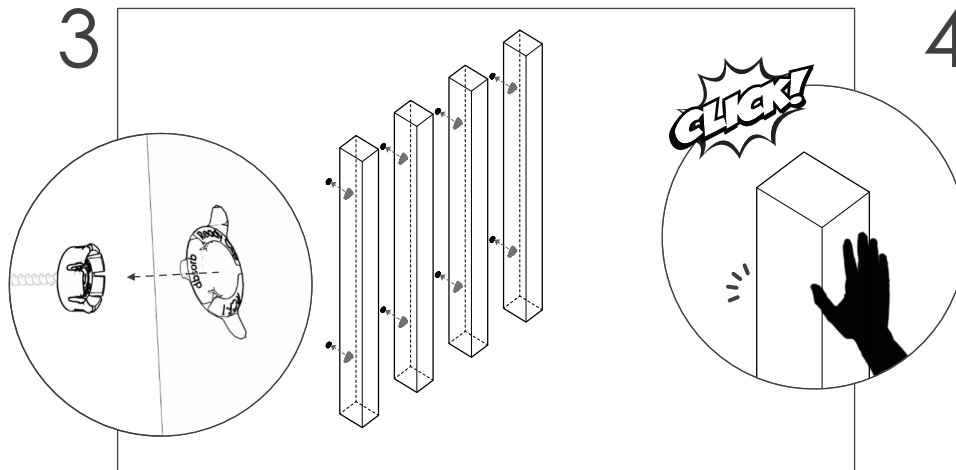

Align acoustic panel, making sure the Male and Female\* Ready-Clips™ are positioned correctly. Firmly push at each fitment spot until Clips lock into place.

\*Female Ready-Clips™ already installed in Acoustic Batten

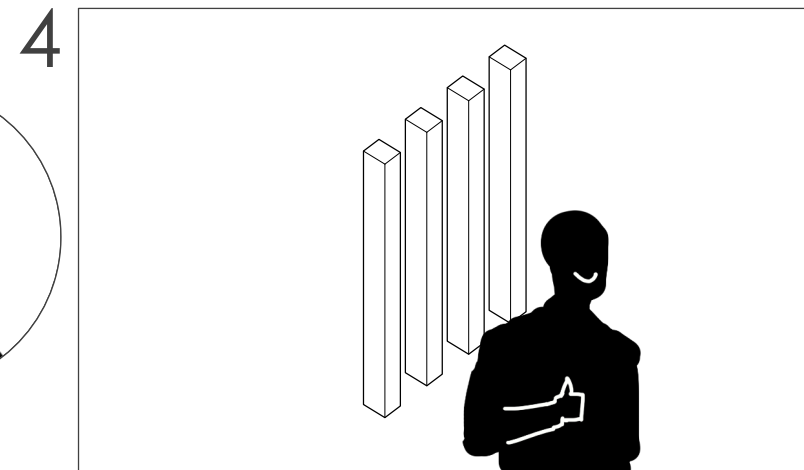

Enjoy your finished acoustic Battens!