



Installation Instructions

Step 1

Ensure that the structural opening is square and level and is the correct size.

Make sure the stud frame opening has double studs, the manufacturer strongly recommends timber studs or a minimum .75mm metal studs on both sides of the opening.


i When using concealed hinges, the stud must be **notched** at each hinge location to ensure proper fitment.

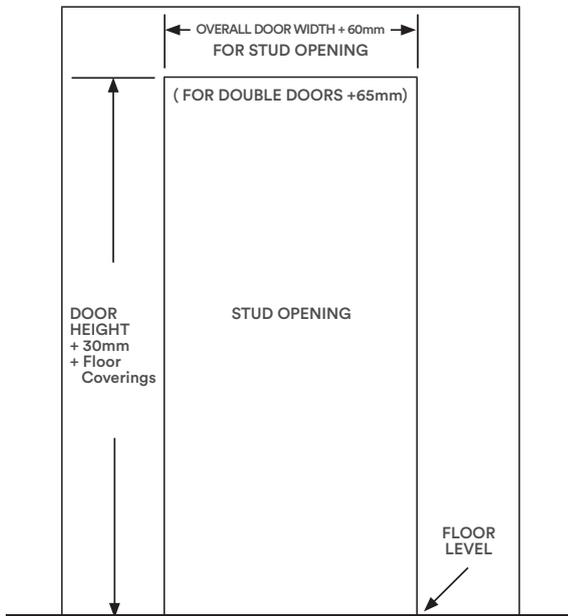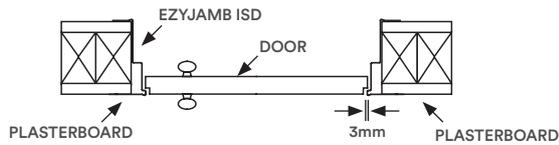


Step 2

Fasten hinge side first, making sure jamb is level and as tight against stud opening as possible. Then screw at 200mm centers up stile, screwing back through plasterboard into stud work See Detail 'B' and 'C'.


Double screw all ends as Detail D. and beside hinge position - both above and below hinge as Detail E.

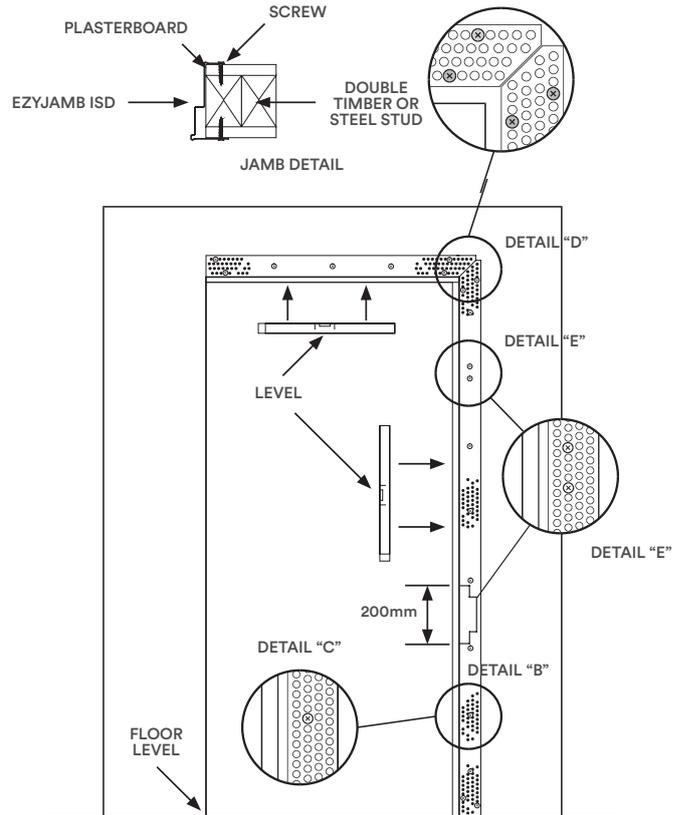

Step 2A | Head Installation

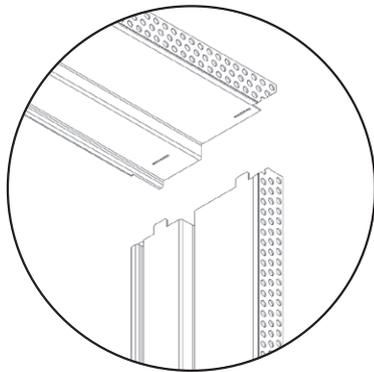

Locate fixing tabs to header.

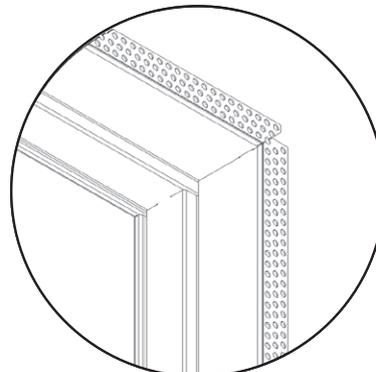


Corner Detail Completed

Installation Instructions

Step 3



Fasten the final vertical section (strike jamb) below the head section. Ensure that the spacing between the two vertical sections are spaced evenly at the required distance.

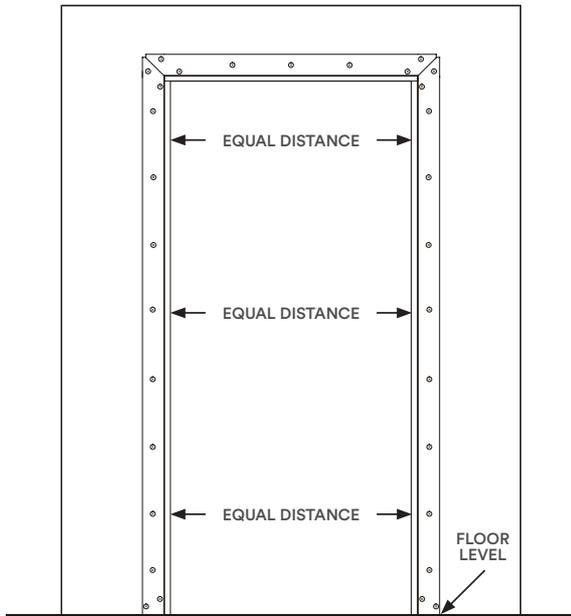



Step 4

Ensure the perforated side strips sit flat against the plasterboard to enable the jamb sections to be easily set into the wall surface. **All the corners must be taped and plastered/jointed in as Detail F.** Finish the jamb with approved plaster/jointing compound.

Hang the door in position leaving about 3mm clearance from the top and the hinged side using the EzyJamb Standard or Concealed Hinges. Surface mount the striker plate into position to align with the latch plate punching.

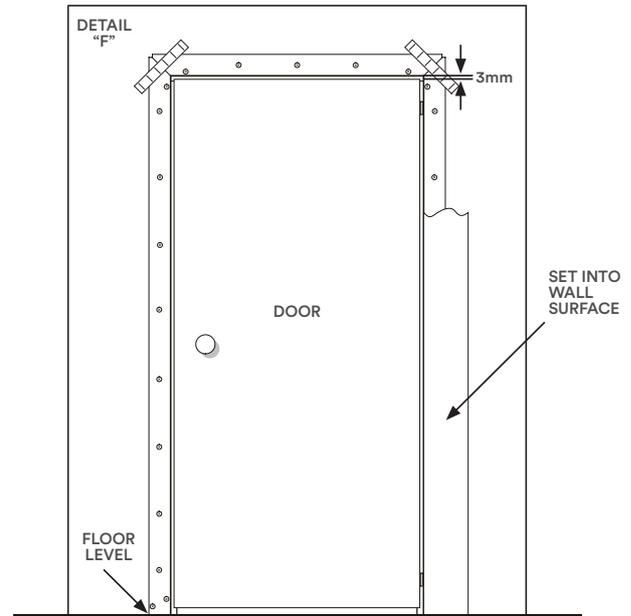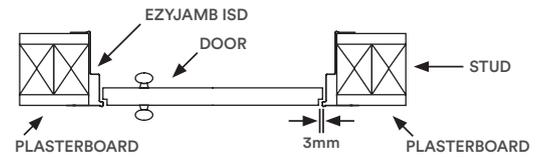

Door Rebate and Latch Plate Detail

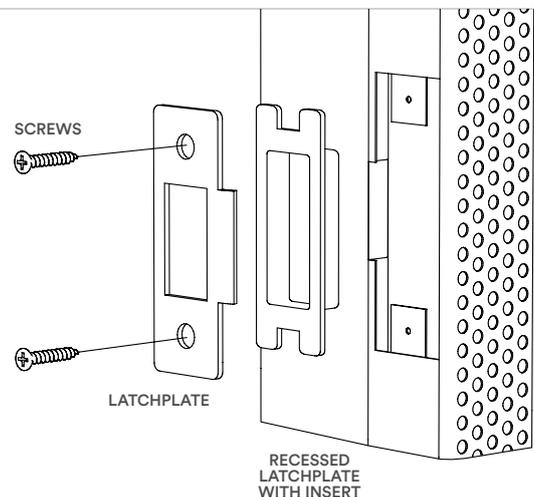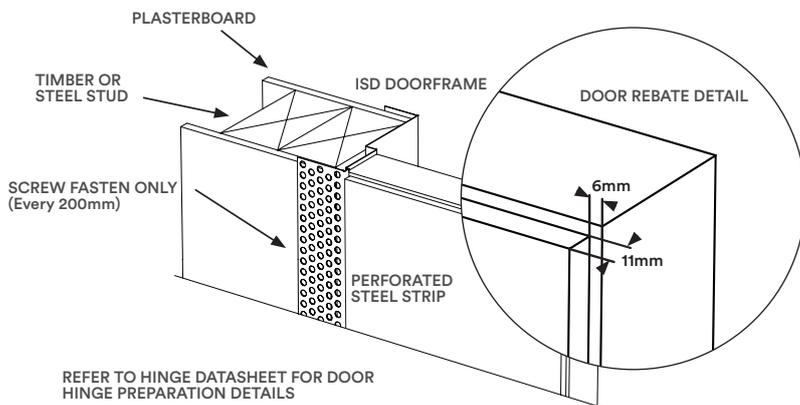

Information contained within this document supersedes all previous versions and is subject to change without notice.