

1 HOUR, WALL, CONCEALED HINGE, ACCESS HATCH.







FEATHERED FLANGE

SETTING BEAD

CONCEALED HINGES

GENERAL

The Fyreguard 1 Hour WH - FYREHATCH is designed to provide a flush set or flanged fire rated access hatch for wall applications where access is required, while still maintaining at least a 1 hour fire rating. The 1 Hour WH - FYREHATCH sits flush with the wall lining and has concealed hinges to limit visual impact. The panel is secured by a rim lock with a key provided or can be individually keyed for maximum security.

USES

The 1 Hour WH -FYREHATCH is used in fire rated walls where access is required for service installations or maintanence.

SIZES

The maximum size is 1200x700mm.

Stock sizes are: 300x300, 400x400, 450x450, 530x530 & 600x600mm

Non standard sizes are available on request.

FIRE TEST DATA

The 1 Hour WH - FYREHATCH has been tested and assessed to Australian Standard AS1530.4 to provide an FRL of -/60/60. Please contact your nearest Fyreguard office for further information.

KEY FEATURES

- Product fit for purpose to meet the requirements of NCC (BCA)
- Wall application
- Simple Installation
- Australian Made
- Non Standard sizes available
- Flush fitting to Wall
- Concealed Hinges

SPECIFICATION

Fyreguard 1 Hour WH - FYREHATCH FRL -/60/60 fire rated access hatch. Wall Application. PH. 07 55934955

INSTALLATION

Refer to following pages of this data sheet for installation instructions or contact your nearest Fyreguard office for assistance.

ARCHITECTURAL

Refer to following pages of this data sheet for dimensions of frame, profile and panel.


NB: ALL FYREGUARD FIRE RATED ACCESS HATCHES ARE LABELED FOR EASE OF COMPLIANCE AND MAINTAINENCE INSPECTIONS. LABELING IS IN ACCORDANCE WITH FPAA GOOD PRACTICE GUIDE AND AS4072.1

NB: Fyrequard is not responsible if recipients of installation instructions, fire test reports or any relevant literature incorrectly interpret the contents or use products based on those interpretations.


INSTALLATION INSTRUCTIONS

1 HOUR, WALL HINGED, FIRE RATED ACCESS HATCH FIXING DETAIL:

- 1. Mark out and cut opening in the ceiling.
- Frame opening with steel studs or trimmers.
 Ensure studs or trimmers are connected to joists or ceiling support system. Line the studs or trimmers with fire rated board of the same thickness as the fire exposed face.
- 3. Match access panel to the opening.
- 4. Open the hatch/panel and secure frame to the studs or trimmers with steel screws on all 4 sides of the hatch in the holes provided. For masonry installations use 60x6mm masonry anchors. For 'Set Bead' installations remove the hatch/panel and flush set. Return hatch/panel into the frame and test operation. Ensure the hinge screws are tightened.
- While the hatch/panel is open apply fire rated mastic sealant to any gaps between the access hatch frame and the inside reveal of the ceiling openg.
- 6. Close the hatch/panel and engage the lock.

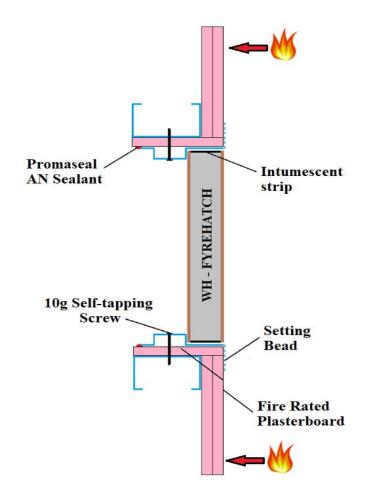

ARCHITECTURAL DETAILS

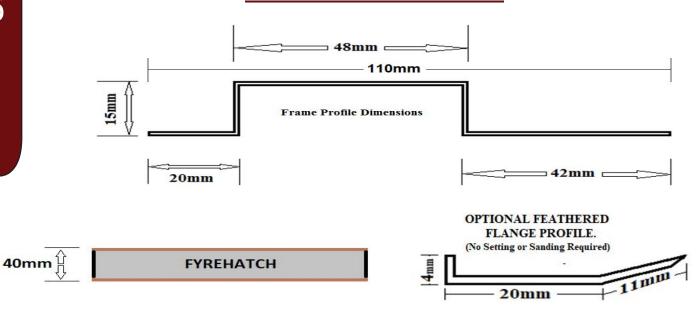


NB: ALL FYREGUARD FIRE RATED ACCESS HATCHES ARE LABELED FOR EASE OF COMPLIANCE AND MAINTAINENCE INSPECTIONS. LABELING IS IN ACCORDANCE WITH FPAA GOOD PRACTICE GUIDE AND AS4072.1




INSTALLATION INSTRUCTIONS

1 HOUR, WALL HINGED, FIRE RATED ACCESS HATCH FIXING DETAIL:

- 1. Mark out and cut opening in the ceiling.
- 2. Frame opening with steel studs or trimmers. Ensure studs or trimmers are connected to joists or ceiling support system. Line the studs or trimmers with fire rated board of the same thickness as the fire exposed face.
- 3. Match access panel to the opening.
- 4. Open the hatch/panel and secure frame to the studs or trimmers with steel screws on all 4 sides of the hatch in the holes provided. For masonry installations use 60x6mm masonry anchors. For 'Set Bead' installations remove the hatch/panel and flush set. Return hatch/panel into the frame and test operation. Ensure the hinge screws are tightened.
- While the hatch/panel is open apply fire rated mastic sealant to any gaps between the access hatch frame and the inside reveal of the ceiling openg.
- 6. Close the hatch/panel and engage the lock.

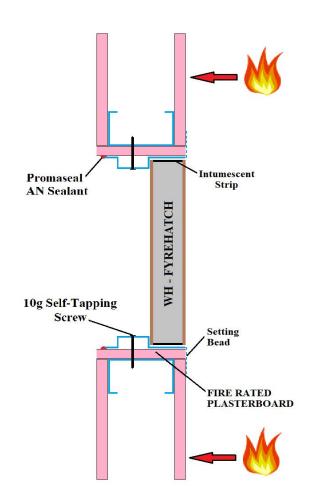

ARCHITECTURAL DETAILS

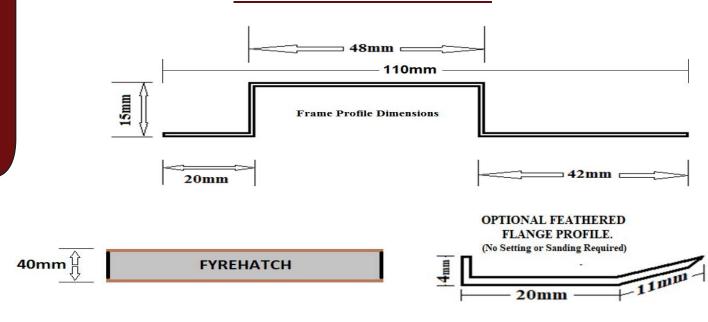


NB: ALL FYREGUARD FIRE RATED ACCESS HATCHES ARE LABELED FOR EASE OF COMPLIANCE AND MAINTAINENCE INSPECTIONS. LABELING IS IN ACCORDANCE WITH FPAA GOOD PRACTICE GUIDE AND AS4072.1




INSTALLATION INSTRUCTIONS

1 HOUR, WALL HINGED, FIRE RATED ACCESS HATCH FIXING DETAIL:

- 1. Mark out and cut opening in the ceiling.
- Frame opening with steel studs or trimmers.
 Ensure studs or trimmers are connected to joists or ceiling support system. Line the studs or trimmers with fire rated board of the same thickness as the fire exposed face.
- 3. Match access panel to the opening.
- 4. Open the hatch/panel and secure frame to the studs or trimmers with steel screws on all 4 sides of the hatch in the holes provided. For masonry installations use 60x6mm masonry anchors. For 'Set Bead' installations remove the hatch/panel and flush set. Return hatch/panel into the frame and test operation. Ensure the hinge screws are tightened.
- While the hatch/panel is open apply fire rated mastic sealant to any gaps between the access hatch frame and the inside reveal of the ceiling openg.
- 6. Close the hatch/panel and engage the lock.

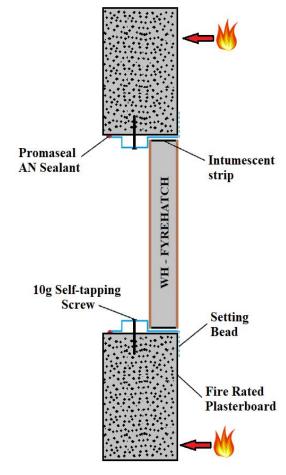

ARCHITECTURAL DETAILS

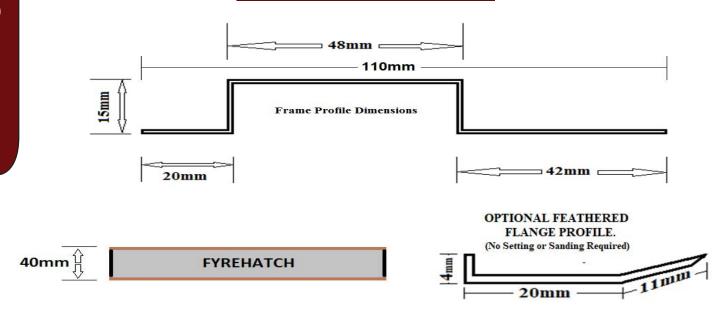

NB: ALL FYREGUARD FIRE RATED ACCESS HATCHES ARE LABELED FOR EASE OF COMPLIANCE AND MAINTAINENCE INSPECTIONS. LABELING IS IN ACCORDANCE WITH FPAA GOOD PRACTICE GUIDE AND AS4072.1